



GB Instruction for use
LV Lietošanas pamācība

POWERTEX Chain Block model PCB-S1

POWERTEX Chain Block PCB-S1 0.25 – 10 tonnes


Instruction for use (GB) (Original instructions)

Read through these user instructions carefully before using the chain block. Improper operation may lead to hazardous situations!

General safety provisions

- Check the function of the chain block before use. See “Daily checks” on page 3.
- Full function of the brake system can only be secured at a minimum load of 30 kg for capacities (WLL) up to 1 ton, and for capacities (WLL) above 1 ton, the minimum load to be greater than 3% of the rated capacity (WLL).
- Do not exceed the maximum load.
- Handle the chain block with care. Do not throw the block about or let it fall to the ground.
- Do not use the chain block for welding work where it is exposed to welding spatter or current.
- The chain block must not be used for lifting persons.

Technical data

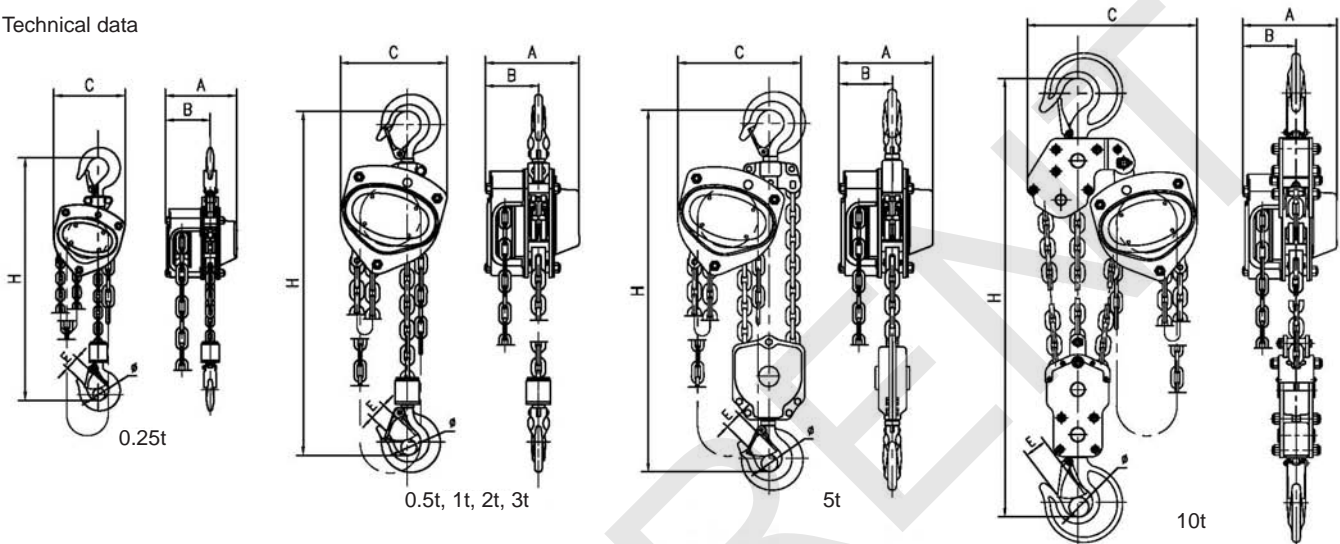

Model	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1
Max. Load tonnes	0,25	0,5	1	2	3	5	10
Standard lifting height *) m	3	3	3	3	3	3	3
Number of block falls	1	1	1	1	1	2	3
Pull on hand chain daN (kp)	19	21	29	36	41	40	54
Load chain	4x12	5x15	6,3x19,1	8x24	10x30	9x27	10x30
Dimension A mm	106	128	142	175	195	183	195
Dimension B mm	68	75	76	88	95	90	95
Dimension C mm	108	130	150	185	226	255	355
Dimension Ø mm	18	20	25	33	36	43	44
Dimension E mm	20	22	26	35	37	43	47
Dimension H min mm	280	280	330	385	435	615	810
Weight for standard lift height kg	6,4	8,9	12	19,5	29,4	36,3	64,1

*) Length of hand chain varies according to lifting height.

Function

The load hook is raised or lowered by pulling on the hand chain. The load will remain where it is even when the hand chain is released because of the effective reaction brake.

Suspension of chain block

Suspend the block from an eye, shackle, girder trolley etc. with sufficient load capacity. With the chain tightened, both hooks must be vertically aligned.



NB! No bending stresses may be applied to block, hooks or load chain.

Raising/lowering

Only use straps and slings of sufficient load capacity. Check that the load is not anchored to the floor/ground or is otherwise fixed before making the lift. Ensure that the load chain hangs vertically and has no kinks. The hand chain must also be in good condition and easily accessible. The load is raised or lowered by pulling the hand chain in either direction.

Warning:

- Only hand power from a single person is permitted on the hand chain. If the chain feels too heavy, use a bigger chain block or reduce the load.
- Make sure no-one stands beneath a hanging load.
- Do not step onto a hanging load.
- Do not raise or lower so far that the load hook hits the block housing.
- The chain block must not be used for pulling loads.
- The block must not be subjected to dynamic stresses, for example where a load connected to the block is launched from a height.
- Do not leave a block with a suspended load unattended.

Attachment of loads

Check the equipment before use. Improper attachment of loads can be highly dangerous (see Figs. 2 a – 2 e).



Fig 2 a
The sling is applying load to the hook tip

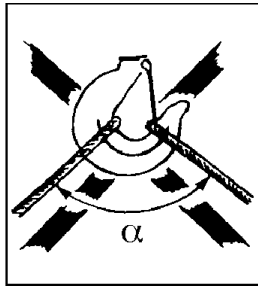


Fig 2 b
Excessive top angle on sling!
 α max 60°

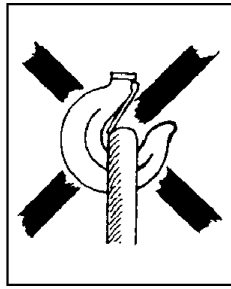


Fig 2 c
Hook latch obstructed

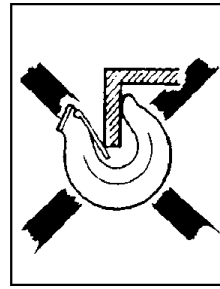


Fig 2 d
Hook tip subject to additional bending stress

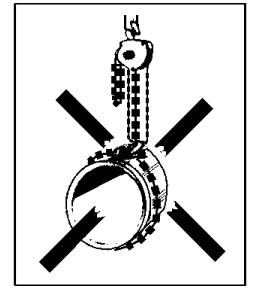


Fig 2 e
Load chain must not be used as a sling

Combined lifts

Combined lifts present special risks. This is where two or more chain blocks are used simultaneously on the same load. Danger to persons and risk of material damage can arise through dynamic stresses and uneven load distribution causing overload on individual blocks. Combined lifts must therefore be supervised by a competent person with experience in this type of lift.

Daily checks

After every working day on which the chain block has been used, the following should be checked:

- Is the chain block deformed or otherwise damaged? Are any parts missing?
- Is any deformation or other damage visible on the suspension device (eye, shackle, bolt, trolley etc.)?
- Are the hooks intact or have any hooks opened? Are the hook latches correct and functional?
- Wipe down the chain block and oil the load chain as required.
- The load chain must be undamaged, i.e. no signs of wear and no deformed or otherwise damaged links.
- The load chain must not be kinked or twisted. With two-fall or multi-fall chain blocks there is a risk of the chain twisting if the bottom hook assembly ends up looped through the chain sling – usually during refitting or moving the chain block between work stations. See Fig 3.
- The hand chain must also be in good condition.
- The brake function must be intact.

In the event of faults or failures, the block must be repaired and carefully checked by a specialist before reuse.

Continuous maintenance - lubrication

Oil the hook latches and bearings. Grease the pawl and ratchet and also the gear. Lubrication must be sparingly and carefully applied so no grease gets on the brake disk. Oil the load chain for longer life.

Periodic checks

Periodic checks are normally carried out yearly to detect and remedy any faults. If required (e.g. high frequency of use), more frequent checks may be carried out. See "Checklist for periodic checks". Measure hooks and chain to detect any changes in shape.

Checks on load hook (see Fig. 4 and Table 1)

Opening dimension I on the hooks is important. A hook with too large a maximum dimension has been exposed to overloading or overheating. It therefore does not have the necessary load capacity. The hooks may also have been exposed to long-term wear (dimension K).

Hooks must be discarded and replaced if:

- The maximum I value is exceeded (according to Table 1)
- The minimum K value falls short (according to Table 1)
- The hook shows signs of cracking
- The hook is deformed or otherwise damaged

Defective hooks must be replaced before using the chain block again.

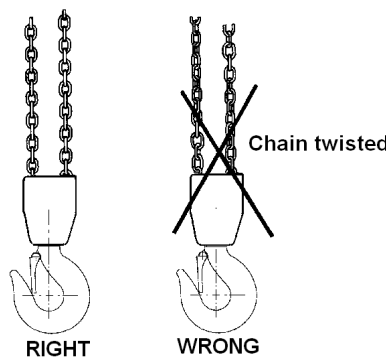


Fig. 3 The chain must not be twisted

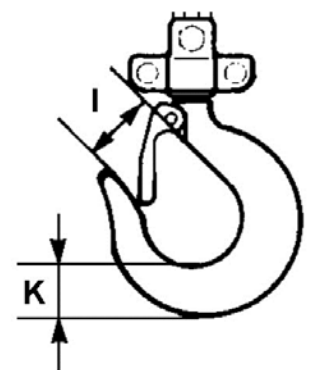


Fig. 4 Load hook

Table 1 Load hook

Max. load t	0,25	0,5	1	2	3	5	10
Model	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1
Dimension I nominal mm	24	25,5	30	38,5	41,5	47	55
Dimension I max mm	26,4	28,0	33	42,3	45,5	51,7	60,5
Dimension K nominal mm	15	19	25	33,5	39	44,5	62
Dimension K min mm	13,5	17,1	22,5	30,2	35,1	40,0	55,8

Checks on load chain (see Fig. 5 and Table 2)

Inspect the load chain over its whole length to detect any deformed or otherwise damaged links. Make a check measurement of suspect links. Measure the worn areas. Also, every 300 mm (normally), make check measurements of the internal length of 5 links (pitch dimension 5xP – according to Table 2).

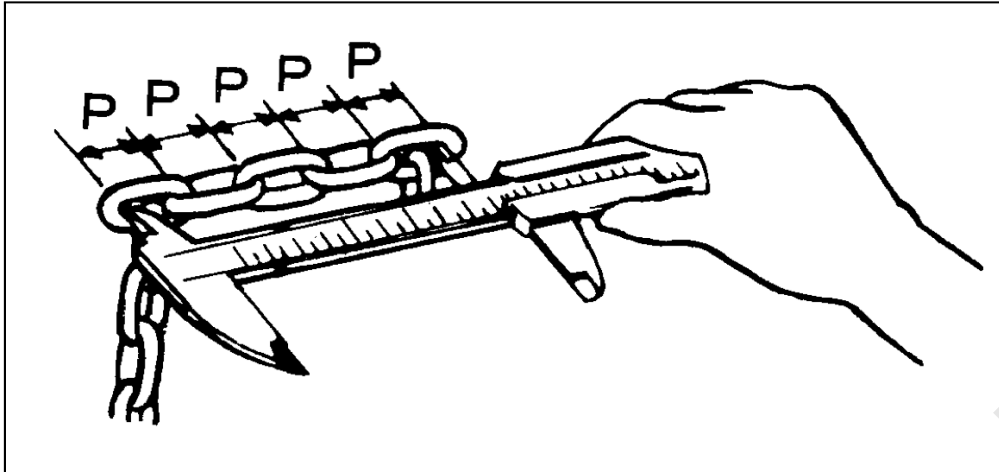


Fig 5 Checking chain dimensions

Table 2 Load chain

Max. load t	0,25	0,5	1	2	3	5	10
Model	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1
Link diameter nominal mm	4,0	5,0	6,3	8,0	10,0	9,0	10,0
Link diameter min. mm	3,6	4,5	5,7	7,2	9,0	8,1	9,0
Pitch dimension (5xP) nominal mm	60,0	75,0	95,0	120,0	150,0	135,0	150,0
Pitch dimension (5xP) max. mm	61,8	77,2	98,0	123,5	154,5	139,0	154,5

The load chain must be discarded and replaced if:

- cracks are detected on any link
- any link is deformed or otherwise damaged
- The minimum value of any link's diameter falls short
- the maximum value of the pitch dimension is exceeded at any point
- the chain is damaged by overheating or has been affected by weld splatter

Load chains must **not** be repaired – they must be replaced by new chain. If it is desired to lengthen the chain, it must be replaced by a new and longer chain.

Replacement of the chain shall be performed professionally by an authorized repairer and the chain must meet the requirements stated in the standard EN 818-2 from the following manufacturers: Chaineries Limousines, Pewag, Thiele or Rud

Repairs

The chain block must not be modified. Repairs must be carried out by specialists. Damaged parts must only be replaced with original Powertex spare parts. Order them through your dealer.

Declaration of conformity

CERTEX
Wenner Gren Center
Sveavägen 166 15fl
SE-113 46 Stockholm

hereby declares that Powertex Chain Block PCB S1 as described above has been manufactured in conformity with EC Machinery Directive 2006/42/EC and amendments.

Checklist for periodic checks (normally yearly – more frequently if necessary)

Daily	Yearly	Inspection items	Inspection method	Note
Labels				
X	X	Rating plate	Visual	If the plate is hard to read - replace it
Function				
X	X	Raising and lowering function	Test without load	A low snapping noise should be audible
-	X	Raising and lowering function	Test with rated weight for min 300 mm	Load chain sprocket and chain work well together. Brake works. Hand pulling on the hand chain feels even and not too heavy
Hooks				
X -	X	Hook opening	Visual Measurements	Looks normal See Fig. 4 and Table 1
X	X	Deformation	Visual	No visible deformation
	X	Hook bearing	Visual	No abnormal play
X -	X	Wear, cracks, deformation and corrosion	Visual Measurements	No visible damage See Fig. 4 and Table 1
	X	Hook bearing	Visual	No abnormal play
Load chain				
X -	X	Pitch	Visual Measurement	Looks normal. Measure in case of doubt See Fig. 5 and Table 2
X -	X	Wear	Visual Measurement	Looks problem-free. Measure in case of doubt See Fig. 5 and Table 2
X	X	Deformation	Visual	No deformation. Measure in case of doubt
X	X	Cracks etc.	Visual	No cracks
X	X	Rust	Visual	No rust
Housing				
X	X	Frame	Visual	No deformation and no rust
X	X	Gearbox	Visual	No deformation
-	X	Gears	Visual after dismantling	No serious wear or fractures
-	X	Load chain sprocket	Visual after dismantling	No serious wear or cracks. No fractures or deformation
-	X	Hand chain sprocket	Visual	No serious wear or cracks. No fractures or deformation
-	X	Bearings	Visual, testing	No damage, smooth running
Screws				
	X	Screws, nuts, rivets, cotters etc.	Visual	Must not be missing. Tighten loose items. Replace as necessary
Brake				
-	X	Brake disk	Visual	Replace if worn
-	X	Brake screw	Visual	No serious wear
-	X	Pawl and ratchet	Visual	Replace worn parts. Carefully lubricate with grease


POWERTEX ķēdes bloks PCB-S1 0.25 – 10 tonnas Lietošanas pamācība (LV) (tulkojumu instrukcijas oriģinālvalodā)

Pirms ķēdes bloka izmantošanas izlasiet šo lietošanas pamācību. Nepareiza lietošana var būt bīstama!

Vispārēji drošības noteikumi

- Pirms ķēdes bloka lietošanas pārliecinieties, ka tas darbojas. Skatiet punktu „Ikdienas pārbaudes” 7. lappusē
- Nepārsniedziet maksimāli pieļaujamo noslodzi.
- Bremžu sistēma pilnībā darbojas pie minimālās slodzes 30 kg, ja ražotāja noteiktā robežslodze ir līdz 1 tonnai, savukārt, ja robežslodze ir virs 1 tonnas, minimālajai slodzei jābūt lielākai nekā 3% no noteiktās ražotāja noteiktās robežslodzes.
- Rīkojieties ar ķēdes bloku uzmanīgi. Nemēģiniet pacelšanas ierīci un neļaujiet tai nokrist zemē.
- Neizmantojiet ķēžu bloku metināšanas darbos, kur tas var tikt pakļauts dzirksteļu vai strāvas iedarbībai.
- Ķēžu bloku nedrīkst izmantot cilvēku pacelšanai.

Tehniskie parametri

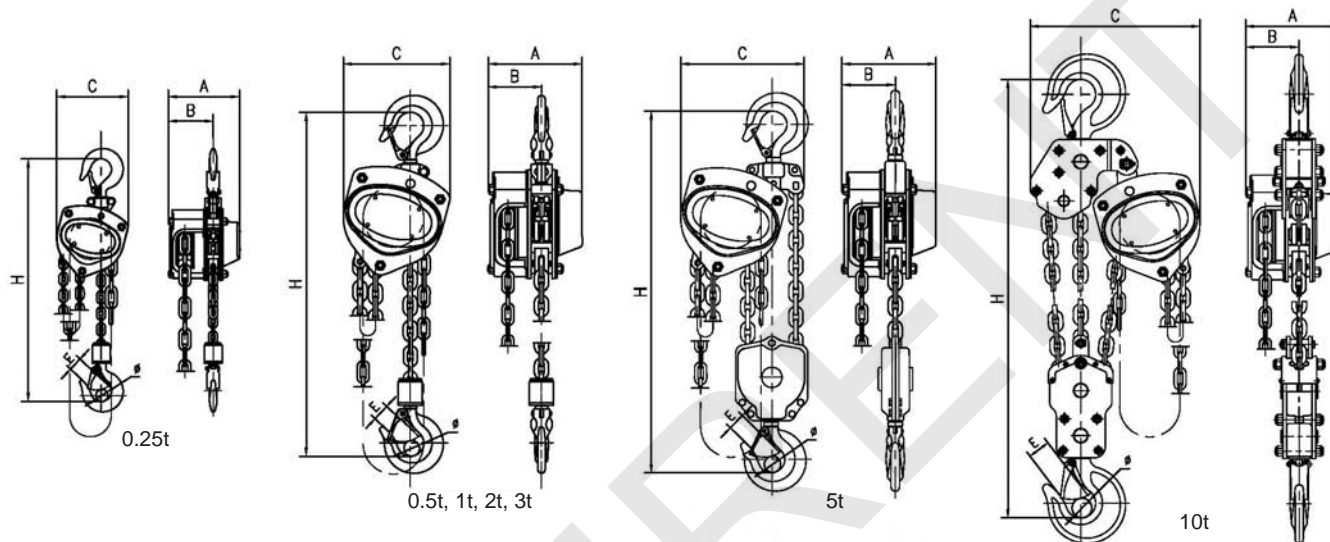

Modelis	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1
Maksimālā slodze, tonnas	0,25	0,5	1	2	3	5	10
Standarta pacelšanas augstums *) m	3	3	3	3	3	3	3
Polispastu skaits	1	1	1	1	1	2	3
Rokas ķēdes vilkšanas spēks daN (kp)	19	21	29	36	41	40	54
Load chain	4x12	5x15	6,3x19,1	8x24	10x30	9x27	10x30
Izmērs A mm	106	128	142	175	195	183	195
Izmērs B mm	68	75	76	88	95	90	95
Izmērs C mm	108	130	150	185	226	255	355
Izmērs Ø mm	18	20	25	33	36	43	44
Izmērs E mm	20	22	26	35	37	43	47
Izmērs H min mm	280	280	330	385	435	615	810
Standarta pacelšanas augstuma masa kg	6,4	8,9	12	19,5	29,4	36,3	64,1

*) Rokas ķēdes garums ir atkarīgs no pacelšanas augstuma.

Darbība

Velkot rokas ķēdi, tiek pacelts vai nolaists kravas āķis. Efektīvā bremze notur kravu nekustīgā stāvoklī, pat ja tiek atlaista rokas ķēde.

Ķēdes bloka piekāršana

Piekariniet ķēdes bloku pie pietiekami izturīgas cilpas, skavas, sijas troleja utt. Kad ķēde ir nostiepta, abiem āķiem ir jāatrodas vertikālā stāvoklī.



Uzmanību! Bloku, āķus un kravas ķēdi nedrīkst pakļaut lieces spēka iedarbībai.

Pacelšana/nolaišana

Lietojiet tikai pietiekami izturīgas siksnas un cilpas. Pirms pacelšanas pārliecinieties, ka krava nav piestiprināta pie grīdas un ir kustināma. Pārliecinieties, ka kravas ķēde karājas vertikāli un nav samezglota. Arī rokas ķēdei ir jābūt labā kārtībā un ērti aizsniēdzamai. Kravas pacelšana un nolaišana notiek, velkot rokas ķēdi.

Uzmanību:

- Rokas ķēdi drīkst vilkt tikai viens cilvēks. Ja ķēde ir pārāk grūti kustināma, izmantojiet lielāku bloku pretestības samazināšanai.
- Zem paceltas kravas nedrīkst atrasties cilvēki.
- Aizliegts kāpt uz paceltas kravas.
- Neļaujiet kravas āķim pacelšanas vai nolaišanas laikā saskarties ar bloka korpusu.
- Ķēžu bloku nedrīkst izmantot kravu vilkšanai.
- Bloku nedrīkst pakļaut dinamiskās slodzes iedarbībai, piemēram, metot zemē pie bloka piestiprinātu kravu.
- Neatstājiet paceltu kravubez uzraudzības.


Kravu stiprināšana

Pirms lietošanas pārbaudiet aprīkojumu. Nepareizi piestiprinātas kravas var būt ļoti bīstamas (skatiet 2.a5.e attēlu).




2.a attēls.

Cilpa rada pārlietu lielu slodzi uz āķa galu

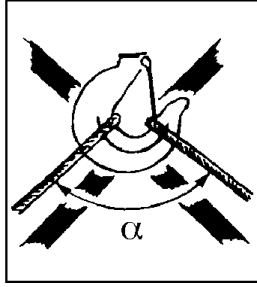


2.b attēls.

Pārlietu liels cilpas augšējais leņķis! α max 60°

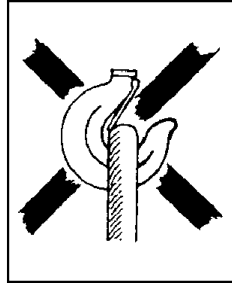


2.c attēls.

Bloķēts āķa aizturis

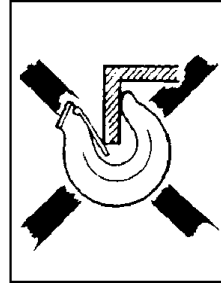

2.d attēls.

Āķa gals tiek liekts

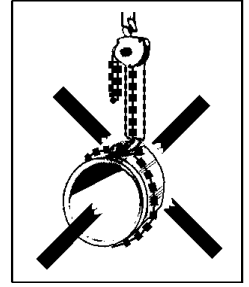

2.e attēls.

Kravas ķēdi nedrīkst izmantot cilpas vietā.

Kombinētā pacelšana

Kombinētā pacelšana ir sevišķi bīstama. Kombinētā pacelšana ir kravas pacelšana ar diviem vai vairākiem blokiem vienlaikus. Dinamiskās slodzes un nevienmērīgs kravas izvietojums var izraisīt dažu bloku pārslodzi, kas savukārt rada apdraudējumu cilvēkiem un materiāla kaitējuma risku. Tāpēc kombinēto pacelšanu ir nepieciešams uzraudzīt speciālistam ar pieredzi šāda veida pacelšanas darbos.

Ikdienas pārbaudes

Katras darba dienas beigās pēc bloka izmantošanas ir jāpārbauda:

- Vai ķēdes bloks nav deformēts vai citādi bojāts? Vai nav pazudušas kādas detaļas.
- Vai ir redzami kādi vizuāli piekares ierīces (cilpas, skavas, skrūves, troleja) bojājumi.
- Vai āķi ir veseli un neviens no tiem nav atvēries? Vai āķu aizturi ir atbilstoši un darbojas.
- Noslaukiet ķēdes bloku un ieeļļojiet kravas ķēdi pēc vajadzības.
- Kravas ķēde nedrīkst būt bojāta, t.i., tajā nedrīkst būt nodilušu, deformētu vai citādi bojātu posmu.
- Kravas ķēde nedrīkst būt savijusies vai samezglota. Izmantojot ķēdes blokus ar diviem vai vairākiem polispastiem, pastāv risks, ka ķēde var sapīties, ja apakšējais āķis tiek izvērsts cauri ķēdes cilpai, kas visbiežāk notiek, pievienojot ķēdes vai pārvietojot bloku uz citu darba vietu. Skatiet 3. attēlu.
- Arī rokas ķēdei ir jābūt labā kārtībā.
- Bremzēm ir jābūt darba kārtībā.

Ja tiek atklātas kļūmes vai defekti, pirms darba turpināšanas pacelšanas ierīce ir jāsalabo un rūpīgi jāpārbauda speciālistam.

Regulāra apkope – eļļošana

Ieeļļojiet āķu aizturus un gultņus. Ieeļļojiet sprūdu un sprūdratu, kā arī zobratus. Eļļošana ir jāveic piesardzīgi un uzmanīgi, lai eļļa nenonāktu uz bremzes diska. Ieeļļojiet ķēdi, lai pagarinātu tās kalpošanas laiku.

Periodiskās pārbaudes

Lai konstatētu un novērstu defektus, reizi gadā jāveic periodiskas apkopes. Ja nepieciešams (piemēram, ja ierīce tiek izmantota ļoti daudz), pārbaudes var veikt biežāk. Skatiet punktu „Periodisko pārbaūžu kontrolsaraksts”. Veiciet āķu un ķēžu mērījumus, lai konstatētu izmaiņas to formā.


Kravas āķa pārbaudes (skatiet 4. attēlu un 1. tabulu)

Ir svarīgs āķu atveres l platums. Ja šis izmērs āķiem ir pārāk liels, tie var tikt pārslogoti un pārkarst. Tāpēc tiem nav nepieciešamās kravnesības. Āķu nodilums var rasties arī ilgstošā laikā (izmērs K).

Āķi ir jāmaina, ja:

- ir pārsniegts maksimāli pieļaujamais l izmērs (saskaņā ar 2. tabulu);
- izmērs K ir mazāks nekā minimāli pieļaujamais (saskaņā ar 2. tabulu);
- uz āķa parādās plaisāšanas pazīmes;
- āķis ir deformēts vai citādi bojāts.

Pirms atsākt lietot ķēdes bloku bojātie āķi ir jānomaina.

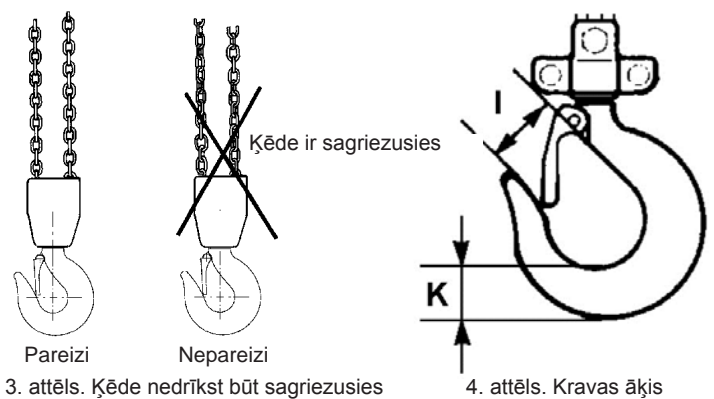

3. attēls. Ķēde nedrīkst būt sagriezusies


4. attēls. Kravas āķis

2. tabula. Āķu izmēri

Maksimālā slodze tonnas	0,25	0,5	1	2	3	5	10
Modelis	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1
Izmērs l, nominālais mm	24	25,5	30	38,5	41,5	47	55
Izmērs l, maksimālais mm	26,4	28,0	33	42,3	45,5	51,7	60,5
Izmērs K, maksimālais mm	15	19	25	33,5	39	44,5	62
Izmērs K, minimālais mm	13,5	17,1	22,5	30,2	35,1	40,0	55,8

Kravas ķēdes pārbaudes (skatiet 5. attēlu un 2. tabulu)

Pārbaudiet ķēdi visā tās garumā, lai pārliecinātos, ka tajā nav deformētu vai citādi bojātu posmu. Izmēriet posmus, kuri liekas šaubīgi. Izmēriet nodilušās vietas. Ik pēc 300 mm (apmēram) izmēriet arī 5 posmu kopējo garumu (soļa garums 5xP – saskaņā ar 2. tabulu).

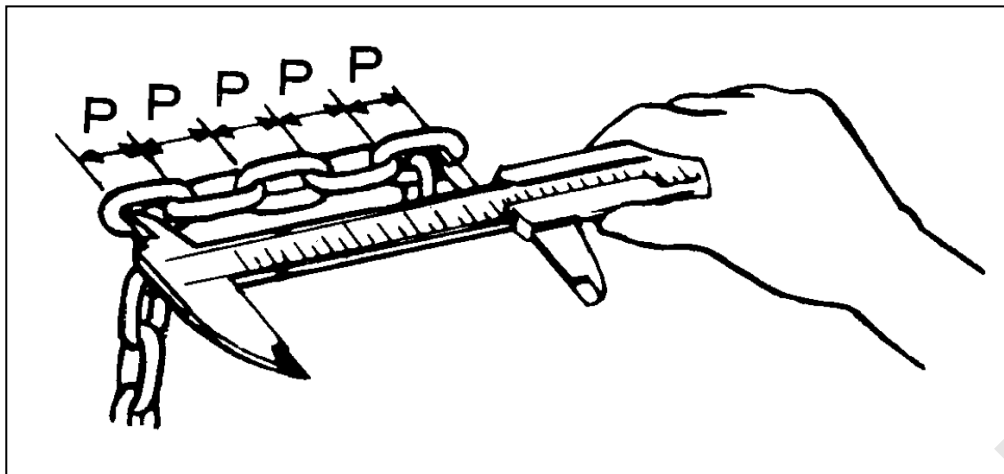

5. attēls. Ķēdes mērīšana

2. tabula. Kravas ķēde

Maksimālā slodze, tonnas	0,25	0,5	1	2	3	5	10
Modelis	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1
Posma diametrs, nominālais mm	4,0	5,0	6,3	8,0	10,0	9,0	10,0
Posma diametrs, minimālais mm	3,6	4,5	5,7	7,2	9,0	8,1	9,0
Soļa garums (5xP), nominālais mm	60,0	75,0	95,0	120,0	150,0	135,0	150,0
Soļa garums (5xP), maksimālais mm	61,8	77,2	98,0	123,5	154,5	139,0	154,5

Kravas ķēde ir jāmaina, ja:

- kāds no posmiem ir ieplaisājis;
- kāds no posmiem ir deformēts vai citādi bojāts;
- kāda posma diametrs ir mazāks par minimāli pieļaujamo;
- kādā vietā tiek pārsniegts maksimāli pieļaujamais soļa garums;
- ķēde ir tikusi sabojāta karstuma vai metināšanas dzirksteļu ietekmē

Kravas ķēdes **nedrīkst** remontēt – tās ir jāmaina pret jaunām. Ja vēlaties ķēdi pagarināt, ir jāiegādājas jauna, garāka ķēde.

Uzstādīšana ķēdes, lai veiktu profesionāli pilnvarotā remontētāja un ķēdi jāatbilst noteiktajām prasībām standartā EN 818-2 no šādiem ražotājiem: Chaineries Limousines, Pewag, Thiele vai Rud.

Remontdarbi

Ķēdes bloku nedrīkst modificēt. Remontdarbus drīkst veikt tikai speciālisti. Bojātās detaļas ir jānomaina ar oriģinālām Powertex detaļām. Pasūtiet tās pie sava piegādātāja.

Atbilstības deklarācija

CERTEX
Wenner Gren Center
Sveavägen 166 15fl
SE-113 46 Stockholm

ar šo apstiprina, kas Powertex ķēdes bloks PBC S1 ir izgatavots saskaņā ar EK Direktīvu par iekārtām 2006/42/EG ar grozījumiem.

Periodisko pārbaužu kontrolsaraksts (parasti – reizi gadā, ja nepieciešams – biežāk)


Ikdienas	Reizi gadā	Pārbaudes objekts	Pārbaudes metode	Piezīme
Marķējums				
X	X	Tehniskā plāksnīte	Vizuāli	Ja uzraksti uz tehniskās plāksnītes ir grūti salasāmi, tā ir jāmaina.
Darbība				
X	X	Pacelšana un nolaišana	Pārbaude bez kravas	Ir jābūt dzirdamai klusai, klikšķošai skaņai.
-	X	Pacelšana un nolaišana	Pārbaudiet ar nominālo kravu vismaz 300 mm augstumā.	Kravas ķēdes rats un ķēde darbojas labi. Bremzes darbojas. Ķēdi var vienmērīgi pavilkt ar roku, nepieliekot pārāk lielu spēku.
Āķi				
X -	X	Āķa atveres platums	Vizuāli Mērīšana	Izskatās normāli Skatiet 4. attēlu un 1. tabulu.
X	X	Deformācija	Vizuāli	Deformācija nav saskatāma
	X	Āķa gultnis	Vizuāli	Normāls brīvgājiens
X -	X	Nodilums, plaisas, deformācija un korozija	Vizuāli Mērīšana	Nav redzamu defektu Skatiet 4. attēlu un 1. tabulu.
	X	Āķa gultnis	Vizuāli	Normāls brīvgājiens
Kravas ķēde				
X -	X	Solis	Vizuāli Mērīšana	Izskatās normāli Izmēriet, ja šaubāties Skatiet 5. attēlu un 2. tabulu.
X -	X	Nodilums	Vizuāli Mērīšana	Izskatās kārtībā Izmēriet, ja šaubāties Skatiet 5. attēlu un 2. tabulu.
X	X	Deformācija	Vizuāli	Deformācijas nav. Izmēriet, ja šaubāties
X	X	Plaisas u.tml.	Vizuāli	Plaisu nav
X	X	Rūsa	Vizuāli	Rūsas nav
Korpuss				
X	X	Rāmis	Vizuāli	Deformācijas un rūsas nav
X	X	Pārnesumu kārba	Vizuāli	Deformācijas nav
-	X	Zobrati	Vizuāli pēc demontāžas	Nav būtiska nodiluma vai plaisu
-	X	Kravas ķēdes rats	Vizuāli pēc demontāžas	Nav būtiska nodiluma vai plaisu Nav pīsumu un deformācijas
-	X	Rokas ķēdes rats	Vizuāli	Nav būtiska nodiluma vai plaisu Nav pīsumu un deformācijas
-	X	Gultņi	Vizuāli, pārbaude	Bez bojājumiem, vienmērīga darbība
Skrūves				
	X	Skrūves, uzgriežņi, kniedes, tapas utt.	Vizuāli	Nedrīkst būt nozaudētas. Pievelciet, ja vajīgi. Ja vajadzīgs, mainiet.
Bremzes				
-	X	Bremžu disks	Vizuāli	Nomainiet, ja nodilis
-	X	Bremžu skrūve	Vizuāli	Bez būtiska nodiluma
-	X	Sprūds un sprūdrats	Vizuāli	Nomainiet nodilušās detaļas. Uzmanīgi ieeļļojiet ar smērvielu.

POWERTEX Chain Block PCB-S1 – Spare parts 0,25 t

When ordering spare parts, specify model, WLL, part number and the quantity needed.

When ordering chain, also specify lifting height.

If the load chain has been damaged or worn out the load sheave probably has to be replaced.

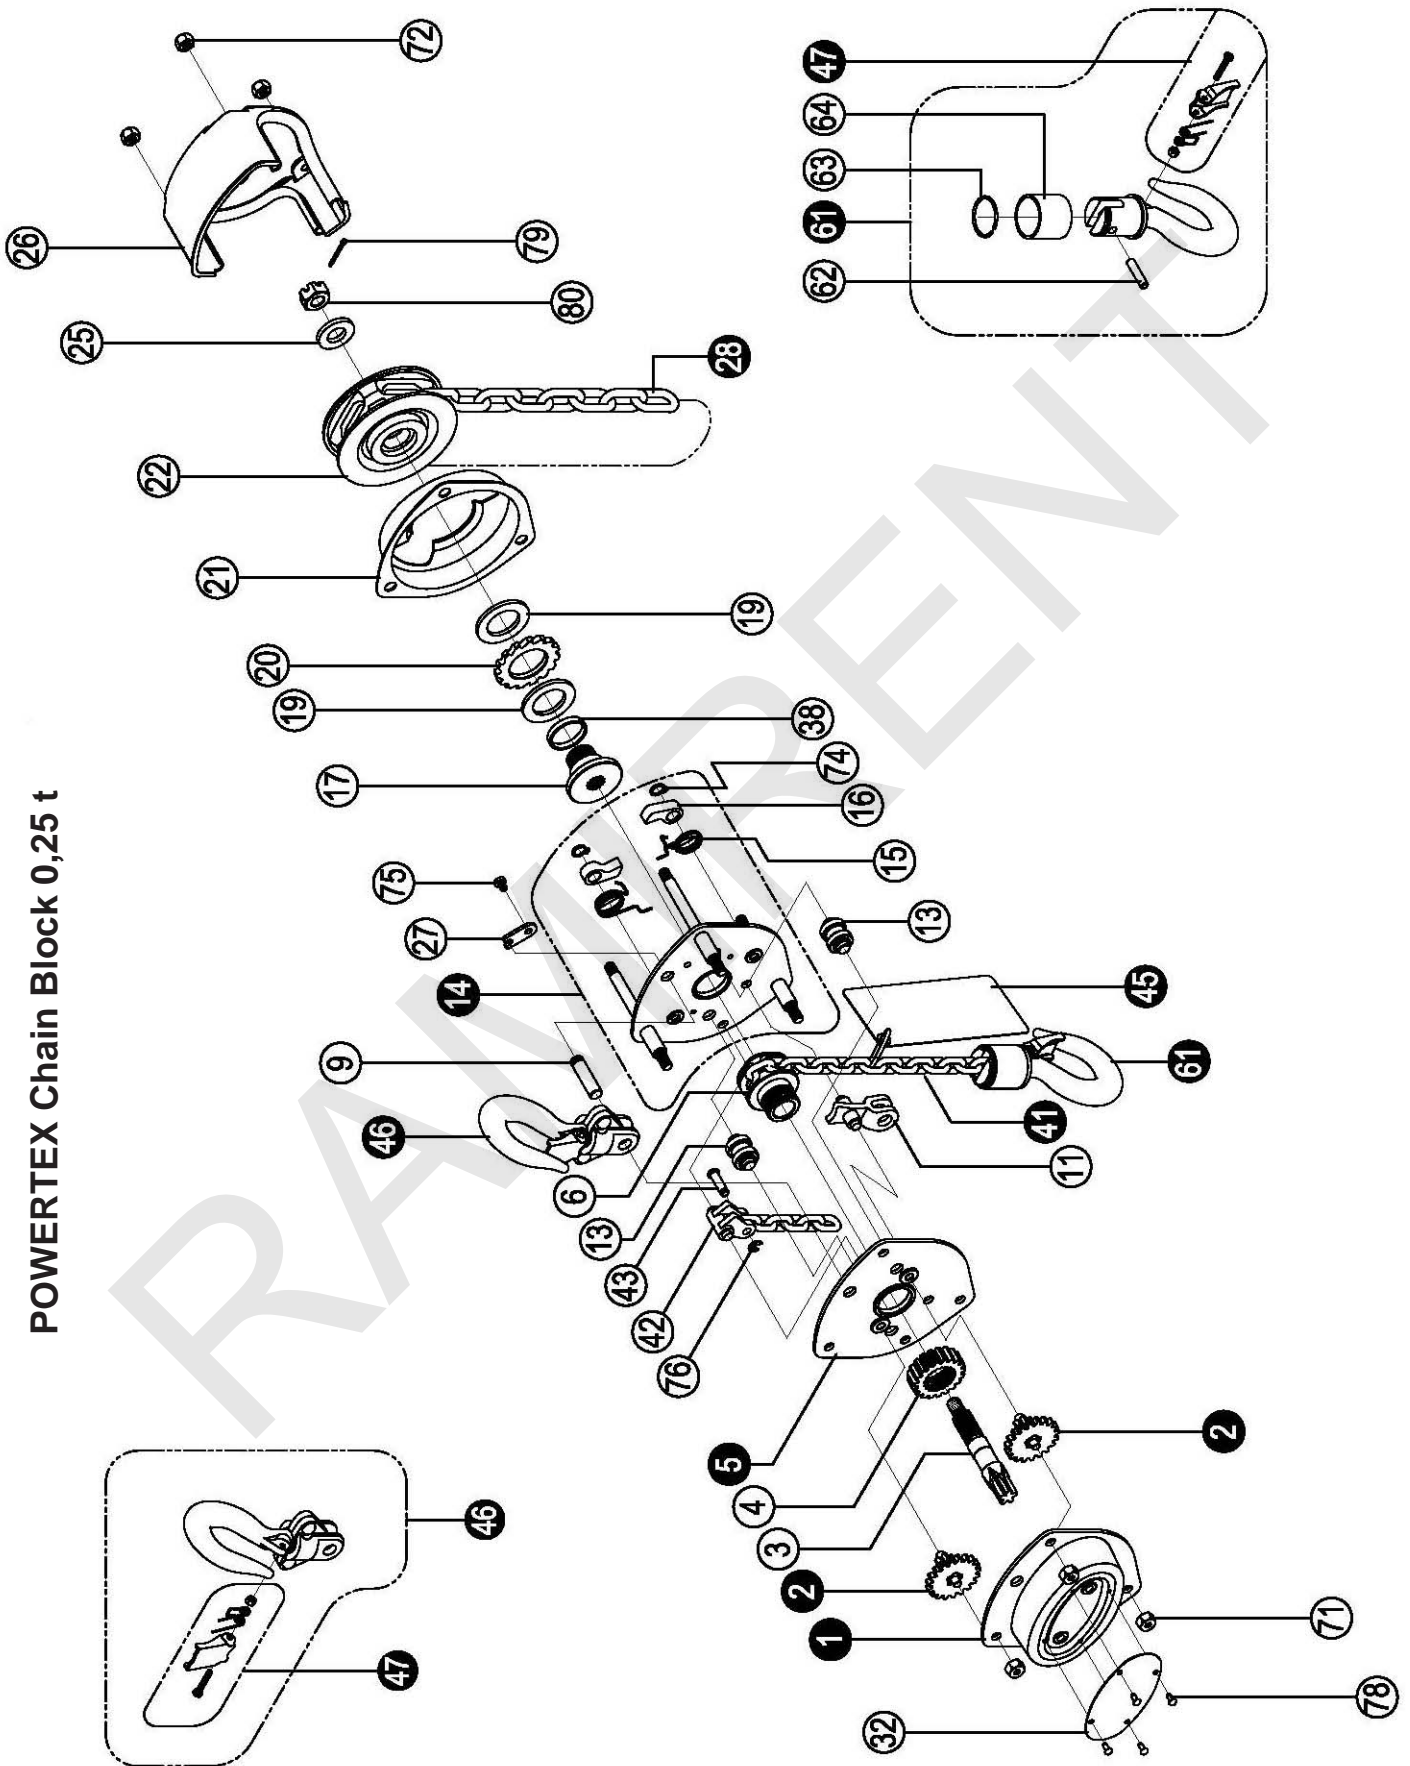

POWERTEX Chain Block 0,25 t

Spare parts list 0,25 t


Pos	Description	0,25 t
1	Gear cover assy	16.10PCB1411001
2	Disc gear assy	16.10PCB1411002
3	Drive shaft	16.10PCB1411003
4	Splined gear	16.10PCB1411004
5	Right side plate assy	16.10PCB1411005
6	Load chain sprocket	16.10PCB1411006
9	Top hook shaft	16.10PCB1411009
11	Chain stripper	16.10PCB1411011
13	Guide roller	16.10PCB1411013
14	Left side plate assy	16.10PCB1411014
15	Pawl spring	16.10PCB1411015
16	Pawl	16.10PCB1411016
17	Brake seat	16.10PCB1411017
19	Friction plate	16.10PCB1411019
20	Ratchet wheel	16.10PCB1411020
21	Brake cover	16.10PCB1411021
22	Hand chain wheel	16.10PCB1411022
25	Washer	16.10PCB1411025
26	Hand chain cover	16.10PCB1411026
27	Positioned plate	16.10PCB1411027
28	Hand Chain	16.10PCB1411028
32	Name plate	16.10PCB1411032
41	Load Chain	16.10PCB1411041
42	End anchor	16.10PCB1411042
43	End anchor pin	16.10PCB1411043
45	Warning plate assy	16.10PCB1411045
46	Top hook assy	16.10PCB1411046
47	Safety latch assy	16.10PCB1411047
61	Bottom hook assy	16.10PCB1411061
62	Bottom hook pin	16.10PCB1411062
71	Metal lock nut	16.10PCB1411071
72	Metal lock nut	16.10PCB1411072
74	Circlip	16.10PCB1411074
75	Cross head screw	16.10PCB1411075
76	Split retainer	16.10PCB1411076
78	Name plate	16.10PCB1411078
79	Split pin	16.10PCB1411079
80	Hexagon nut	16.10PCB1411080

POWERTEX Chain Block PCB-S1 – Spare parts 0,5 – 5 t

When ordering spare parts, specify model, WLL, part number and the quantity needed.

When ordering chain, also specify lifting height.

If the load chain has been damaged or worn out the load sheave probably has to be replaced

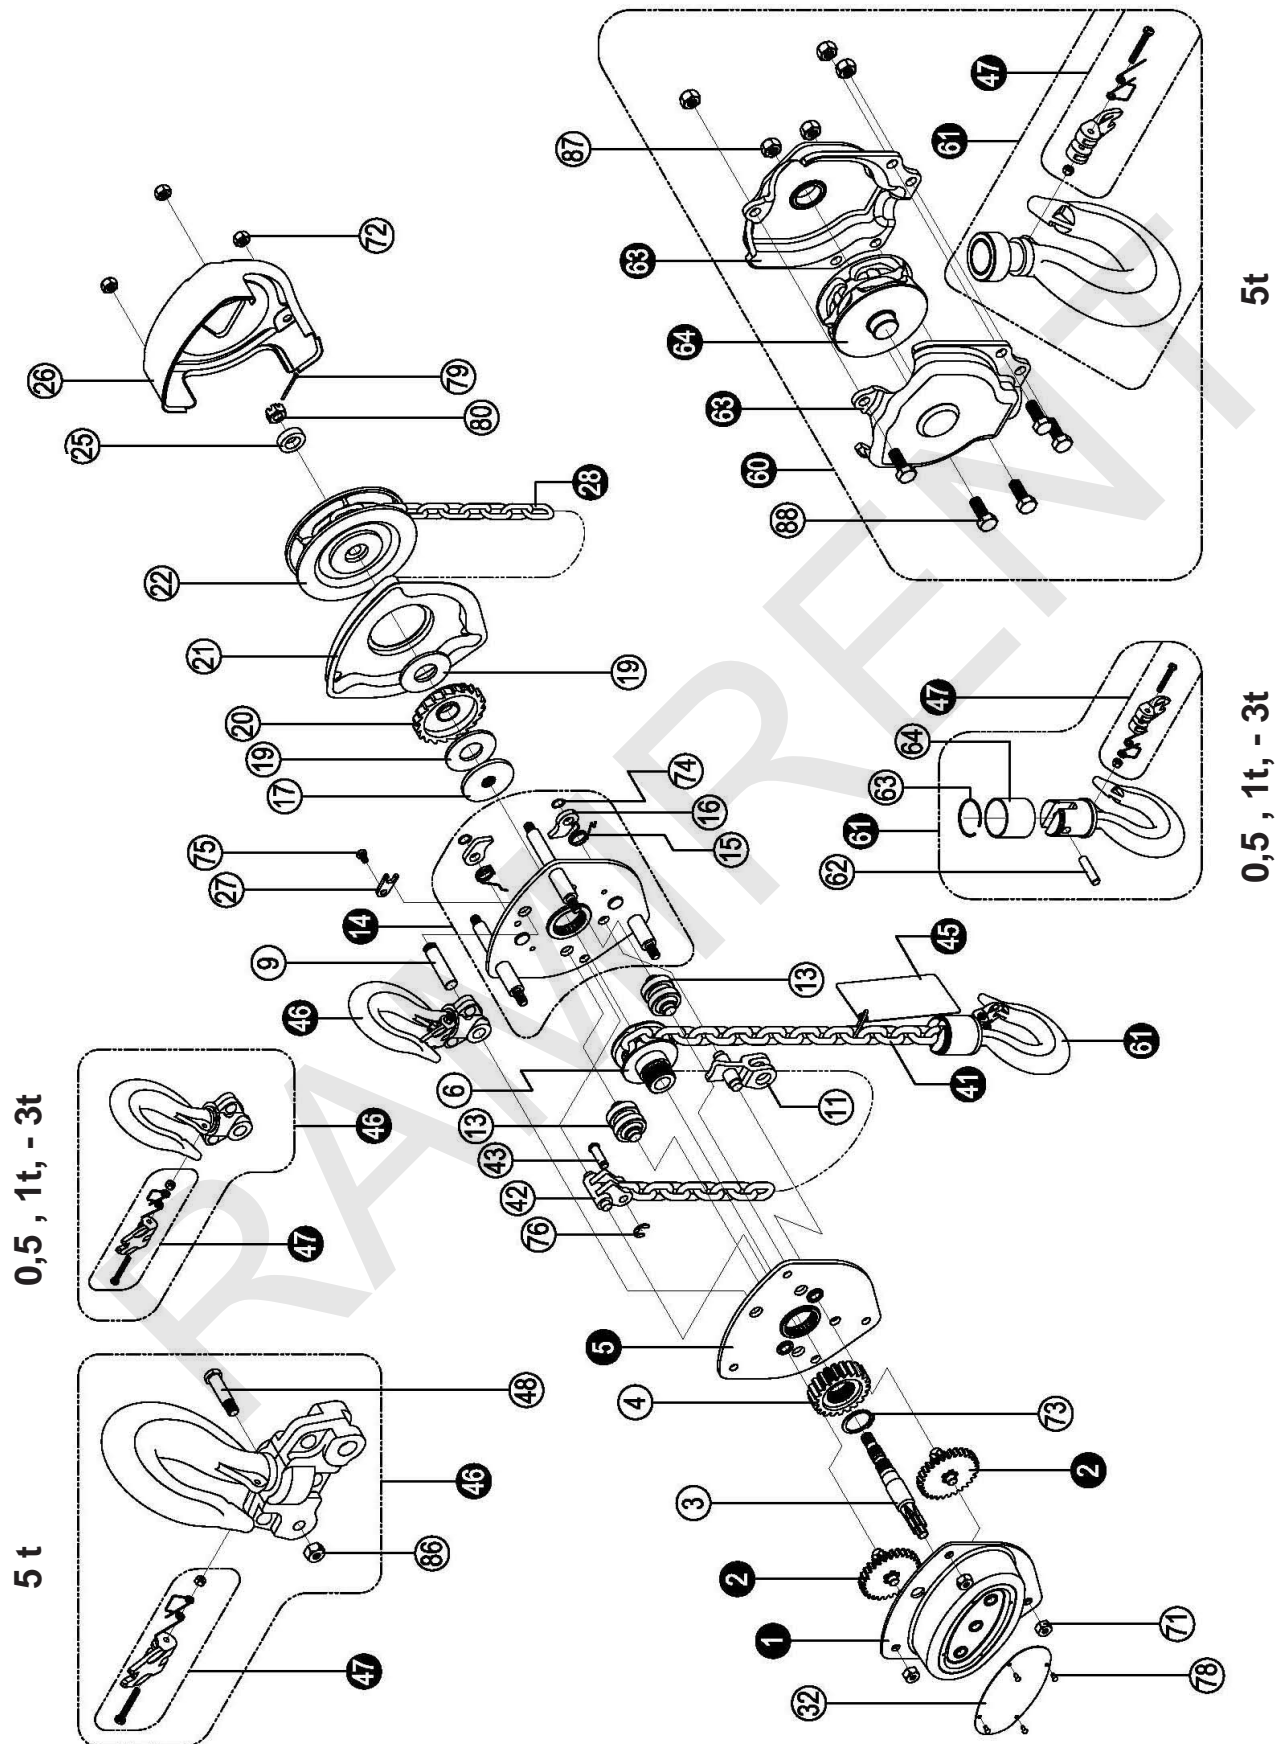

Spare parts list 0,5 – 5 t

Pos	Description	0,5 t	1 t	2 t	3 t	5 t
1	Gear cover assy	16.10PCB1412001	16.10PCB1414001	16.10PCB1416001	16.10PCB1417001	16.10PCB1419001
2	Disc gear assy	16.10PCB1412002	16.10PCB1414002	16.10PCB1416002	16.10PCB1417002	16.10PCB1419002
3	Drive shaft	16.10PCB1412003	16.10PCB1414003	16.10PCB1416003	16.10PCB1417003	16.10PCB1419003
4	Splined gear	16.10PCB1412004	16.10PCB1414004	16.10PCB1416004	16.10PCB1417004	16.10PCB1419004
5	Right side plate assy	16.10PCB1412005	16.10PCB1414005	16.10PCB1416005	16.10PCB1417005	16.10PCB1419005
6	Load chain sprocket	16.10PCB1412006	16.10PCB1414006	16.10PCB1416006	16.10PCB1417006	16.10PCB1419006
9	Top hook shaft	16.10PCB1412009	16.10PCB1414009	16.10PCB1416009	16.10PCB1417009	16.10PCB1419009
11	Chain stripper	16.10PCB1412011	16.10PCB1414011	16.10PCB1416011	16.10PCB1417011	16.10PCB1419011
13	Guide roller	16.10PCB1412013	16.10PCB1414013	16.10PCB1416013	16.10PCB1417013	16.10PCB1419013
14	Left side plate assy	16.10PCB1412014	16.10PCB1414014	16.10PCB1416014	16.10PCB1417014	16.10PCB1419014
15	Pawl spring	16.10PCB1412015	16.10PCB1414015	16.10PCB1416015	16.10PCB1417015	16.10PCB1419015
16	Pawl	16.10PCB1412016	16.10PCB1414016	16.10PCB1416016	16.10PCB1417016	16.10PCB1419016
17	Brake seat	16.10PCB1412017	16.10PCB1414017	16.10PCB1416017	16.10PCB1417017	16.10PCB1419017
19	Friction plate	16.10PCB1412019	16.10PCB1414019	16.10PCB1416019	16.10PCB1417019	16.10PCB1419019
20	Ratchet wheel	16.10PCB1412020	16.10PCB1414020	16.10PCB1416020	16.10PCB1417020	16.10PCB1419020
21	Brake cover	16.10PCB1412021	16.10PCB1414021	16.10PCB1416021	16.10PCB1417021	16.10PCB1419021
22	Hand chain wheel	16.10PCB1412022	16.10PCB1414022	16.10PCB1416022	16.10PCB1417022	16.10PCB1419022
25	Washer	16.10PCB1412025	16.10PCB1414025	16.10PCB1416025	16.10PCB1417025	16.10PCB1419025
26	Hand chain cover	16.10PCB1412026	16.10PCB1414026	16.10PCB1416026	16.10PCB1417026	16.10PCB1419026
27	Positioned plate	16.10PCB1412027	16.10PCB1414027	16.10PCB1416027	16.10PCB1417027	16.10PCB1419027
28	Hand Chain	16.10PCB1412028	16.10PCB1414028	16.10PCB1416028	16.10PCB1417028	16.10PCB1419028
32	Name plate	16.10PCB1412032	16.10PCB1414032	16.10PCB1416032	16.10PCB1417032	16.10PCB1419032
41	Load Chain	16.10PCB1412041	16.10PCB1414041	16.10PCB1416041	16.10PCB1417041	16.10PCB1419041
42	End anchor	16.10PCB1412042	16.10PCB1414042	16.10PCB1416042	16.10PCB1417042	16.10PCB1419042
43	End anchor pin	16.10PCB1412043	16.10PCB1414043	16.10PCB1416043	16.10PCB1417043	16.10PCB1419043
45	Warning plate assy	16.10PCB1412045	16.10PCB1414045	16.10PCB1416045	16.10PCB1417045	16.10PCB1419045
46	Top hook assy	16.10PCB1412046	16.10PCB1414046	16.10PCB1416046	16.10PCB1417046	16.10PCB1419046
47	Safety latch assy	16.10PCB1412047	16.10PCB1414047	16.10PCB1416047	16.10PCB1417047	16.10PCB1419047
48	Top hook pin	-	-	-	-	16.10PCB1419048
60	Bottom hook assy	-	-	-	-	16.10PCB1419060
61	Bottom hook assy	16.10PCB1412061	16.10PCB1414061	16.10PCB1416061	16.10PCB1417061	16.10PCB1419061
62	Bottom hook pin	16.10PCB1412062	16.10PCB1414062	16.10PCB1416062	16.10PCB1417062	-
63	Bottom hook connector assy	-	-	-	-	16.10PCB1419063
64	Idler sheave assy	-	-	-	-	16.10PCB1419064
71	Metal lock nut	16.10PCB1412071	16.10PCB1414071	16.10PCB1416071	16.10PCB1417071	16.10PCB1419071
72	Metal lock nut	16.10PCB1412072	16.10PCB1414072	16.10PCB1416072	16.10PCB1417072	16.10PCB1419072
73	Circlip	16.10PCB1412073	16.10PCB1414073	16.10PCB1416073	16.10PCB1417073	16.10PCB1419073
74	Circlip	16.10PCB1412074	16.10PCB1414074	16.10PCB1416074	16.10PCB1417074	16.10PCB1419074
75	Cross head screw	16.10PCB1412075	16.10PCB1414075	16.10PCB1416075	16.10PCB1417075	16.10PCB1419075
76	Split retainer	16.10PCB1412076	16.10PCB1414076	16.10PCB1416076	16.10PCB1417076	16.10PCB1419076
78	Name plate	16.10PCB1412078	16.10PCB1414078	16.10PCB1416078	16.10PCB1417078	16.10PCB1419078
79	Split pin	16.10PCB1412079	16.10PCB1414079	16.10PCB1416079	16.10PCB1417079	16.10PCB1419079
80	Hexagon nut	16.10PCB1412080	16.10PCB1414080	16.10PCB1416080	16.10PCB1417080	16.10PCB1419080
86	Metal lock nut	16.10PCB1412086	16.10PCB1414086	16.10PCB1416086	16.10PCB1417086	16.10PCB1419086
87	Metal lock nut	16.10PCB1412087	16.10PCB1414087	16.10PCB1416087	16.10PCB1417087	16.10PCB1419087
88	Bolt M10x25	16.10PCB1412088	16.10PCB1414088	16.10PCB1416088	16.10PCB1417088	16.10PCB1419088


POWERTEX Chain Block PCB-S1 – Spare parts 10 t

When ordering spare parts, specify model, WLL, part number and the quantity needed.

When ordering chain, also specify lifting height.

If the load chain has been damaged or worn out the load sheave probably has to be replaced.

POWERTEX Chain Block 10 t

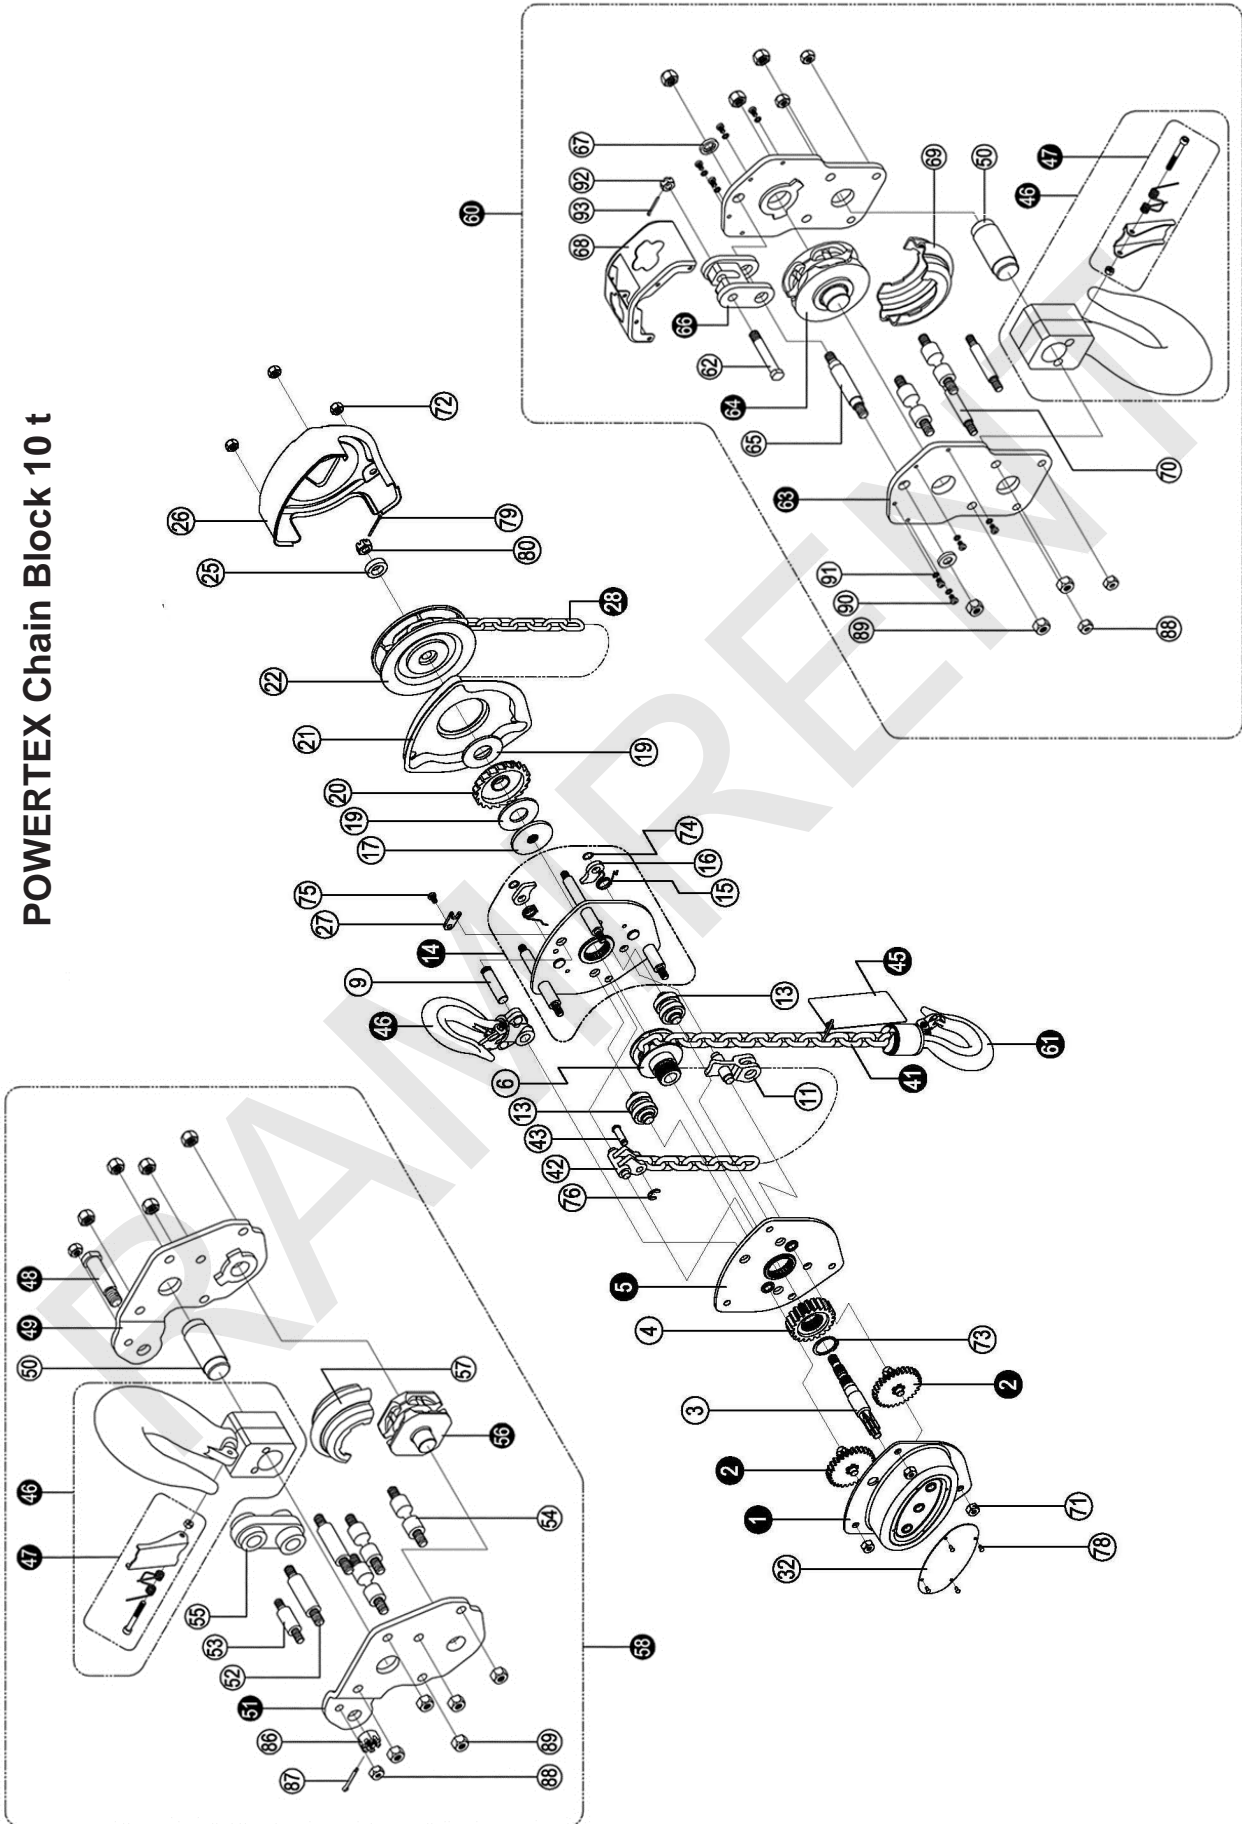

Spare parts list 10 t

Pos	Description	10 t	Pos	Description	10 t
1	Gear cover assy	16.10PCB1423001	54	Stay bolt B	16.10PCB1423054
2	Disc gear assy	16.10PCB1423002	55	Suspension plate	16.10PCB1423055
3	Drive shaft	16.10PCB1423003	56	Idler sheave assy	16.10PCB1423056
4	Splined gear	16.10PCB1423004	57	Protection cover	16.10PCB1423057
5	Right side plate assy	16.10PCB1423005	58	Top hook assy	16.10PCB1423058
6	Load chain sprocket	16.10PCB1423006	60	Bottom hook assy	16.10PCB1423060
9	Top hook shaft	16.10PCB1423009	62	Bottom hook pin	16.10PCB1423062
11	Chain stripper	16.10PCB1423011	63	Hook plate	16.10PCB1423063
13	Guide roller	16.10PCB1423013	64	Bottom idler sheave assy	16.10PCB1423064
14	Left side plate assy	16.10PCB1423014	65	Shaft	16.10PCB1423065
15	Pawl spring	16.10PCB1423015	66	Plate	16.10PCB1423066
16	Pawl	16.10PCB1423016	67	Washer	16.10PCB1423067
17	Brake seat	16.10PCB1423017	68	Protection cover	16.10PCB1423068
19	Friction plate	16.10PCB1423019	69	Cover	16.10PCB1423069
20	Ratchet wheel	16.10PCB1423020	70	Bolt	16.10PCB1423070
21	Brake cover	16.10PCB1423021	71	Metal lock nut	16.10PCB1423071
22	Hand chain wheel	16.10PCB1423022	72	Metal lock nut	16.10PCB1423072
25	Washer	16.10PCB1423025	73	Circlip	16.10PCB1423073
26	Hand chain cover	16.10PCB1423026	74	Circlip	16.10PCB1423074
27	Positioned plate	16.10PCB1423027	75	Cross head screw	16.10PCB1423075
28	Hand chain	16.10PCB1423028	76	Split retainer	16.10PCB1423076
32	Name plate	16.10PCB1423032	78	Name plate	16.10PCB1423078
41	Load chain	16.10PCB1423041	79	Split pin	16.10PCB1423079
42	End anchor	16.10PCB1423042	80	Hexagon nut	16.10PCB1423080
43	End anchor pin	16.10PCB1423043	86	Hexagon recess nut	16.10PCB1423086
45	Warning plate assy	16.10PCB1423045	87	Split pin	16.10PCB1423087
46	Top hook assy	16.10PCB1423046	88	Metal lock nut	16.10PCB1423088
47	Safety latch assy	16.10PCB1423047	89	Metal lock nut	16.10PCB1423089
48	Top hook pin	16.10PCB1423048	90	Cross head screw	16.10PCB1423090
49	Plate (right)	16.10PCB1423049	91	Light spring washer	16.10PCB1423091
50	Shaft	16.10PCB1423050	92	Hexagon recess nut	16.10PCB1423092
51	Plate (left)	16.10PCB1423051	93	Split pin	16.10PCB1423093
52	Stay bolt A	16.10PCB1423052			
53	Short bolt	16.10PCB1423053			

CERTEX Denmark
Tel: +45 74 54 14 37
Fax: +45 74 54 05 62
E-mail: salg@certex.dk
www.certex.dk

CERTEX Sweden
Tel: +46 (0) 8758 0010
Fax: +46 (0) 8758 3813
E-mail: info@certex.se
www.certex.se

CERTEX Norway
Tel: +47 66 79 95 00
Fax: +47 66 79 95 30
E-mail: certex.oslo@certex.no
www.certex.no

CERTEX Finland
Tel: +358 (0) 201 550 220
Fax: +358 (0) 201 550 230
E-mail: info@certex.fi
www.certex.fi

CERTEX UK
Tel: +44 845 230 7475
Fax: +44 845 230 7476
Email: sales@certex.co.uk
www.certex.co.uk

CERTEX Germany
Tel: +49 (0) 211 67009-0
Fax: +49 (0) 211 67009-49
E-mail: info@certex.de
www.certex.de

CERTEX Estonia
Tel: +372 6205 136
Fax: +372 6205 146
E-mail: info@certex.ee
www.certex.ee

CERTEX Lithuania
Tel: +370 (2) 322 297
Fax: +370 (2) 322 298
E-mail: info@certex.lt
www.certex.lt

CERTEX Latvia
Tel: +371 761 1882
Fax: +371 6780 5072
E-mail: info@certex.lv
www.certex.lv

ERLING HAUG
Tel: +47 73 53 97 00
Fax: +47 73 53 97 01
E-mail: firmapost@haug.no
www.haug.no

CERTEX Offshore Services
Tel: +47 71 58 87 00
Fax: +47 71 58 87 01
E-mail: offshore@certexoffshore.no
www.certexoffshore.no

CERTEX Russia
Tel: +7 812 335 09 65
Fax: +7 812 335 09 65
E-mail: salesstp@certex.net
www.certex.net

Mennens Netherlands
Tel: +31(0)20 5811811
Fax: +31(0)20 6840067
E-mail: amsterdam@mennens.nl
www.mennens.nl

Mennens Belgium
Tel: +32(0)3 253 23 23
Fax: +32(0)3 253 23 24
E-mail: info@mennensbelgium.be
www.mennensbelgium.be

CERTEX Lifting KnowHow app

Download The Lifting KnowHow app'en from the App Store / Google play!

The App has the following features:

- Load charts for different types of lifting slings
- Protractor for measuring sling angles
- Instructions for safe use of a selection of lifting gear
- Built-in gps function that finds the CERTEX office closest to your position.
- And a lot more.

The Lifting KnowHow is a unique knowledge transfer programme, exclusively designed by CERTEX.



CertMax +

The CertMax+ system is a unique leading edge certification management system which is ideal for managing a single asset or large equipment portfolio across multiple sites. Designed by CERTEX, to deliver optimum asset integrity, quality assurance and traceability, the system also improves safety and risk management levels.



Marking

The POWERTEX Chain Block is equipped with a RFID (Radio-Frequency Identification) tag, which is a small electronic device, that consist of a small chip and an antenna. It provides a unique identifier for the block.



The POWERTEX Chain Block is **CE** marked

Standard: EN 13157

Warning tag

The warning tag shows some specific and important situations, in which you must pay special attention, when using POWERTEX Chain Blocks and Lever Hoists.



User Manuals

You can always find the valid and updated User Manuals on the web. The manual is updated continuously and valid only in the latest version.

NB! The English version is the Original instruction.

The manual is available as a download under the following link:
www.certex.net/manuals

Version no. 2013-08 Scandinavia



POWERTEX



The Lifting KnowHow



www.certex.net